

 
RoboMaster

Mecanum Wheel

User Guide

使用说明

v1.0 2019.11

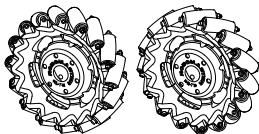

Disclaimer and Warning

Thank you for purchasing this ROBOMASTER™ product. Read this disclaimer carefully before using this product. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. Install and use this product in strict accordance with the document. SZ DJI TECHNOLOGY CO.,LTD. and its affiliated companies assume no liability for damages or injuries incurred directly or indirectly from using, installing, or modifying this product improperly, including but not limited to using non-designated accessories.

DJI™ is a trademark of SZ DJI TECHNOLOGY CO., LTD. (abbreviated as "DJI") and its affiliated companies. Names of products, brands, etc., appearing in this document are trademarks or registered trademarks of their respective owner companies. This product and document are copyrighted by DJI with all rights reserved. No part of this product or document shall be reproduced in any form without the prior written consent or authorization of DJI. The final interpretation right of this disclaimer is reserved by DJI.

 
These documents are included in the product package and are also available online on the DJI product page at www.robomaster.com.

Introduction


The RoboMaster Mecanum Wheels are a commonly used robotic omnidirectional chassis moving solution, which are divided into two types: left-threaded and right-threaded.

Overview

Left-Threaded Mecanum Wheel

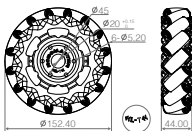


Right-Threaded Mecanum Wheel

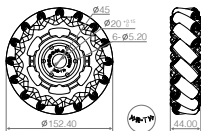 

Mounting and Usage

 The four wheel chassis requires two left-threaded and two right-threaded Mecanum wheels. To install a Mecanum wheel, check the mark on the wheel to see if it is left-threaded or right-threaded, and install the Mecanum wheel to the corresponding side.

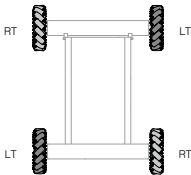

- Replace any Mecanum Wheel Roller if they are badly damaged.
- Visit <https://www.robomaster.com/en-US/products/components/competition> for 3D model drawings of the Mecanum wheel in STEP format.

Specifications

Wheel diameter: 152.4 mm (6 in)

Wheel width: 44 mm

Weight: 660 g

Soft Rubber Material: TPU

Single Wheel Bearing: 20 kg

免责声明

感谢您购买 RoboMaster™ 产品。在使用之前，请仔细阅读本文档，一旦使用，即被视为对本文档全部内容的认可和接受。请严格遵守手册、产品说明和相关的法律法规、政策、准则安装和使用本产品。在使用产品过程中，用户承诺对自己的行为及因此而产生的所有后果负责。因用户不当使用、安装、改装造成的任何损失，DJI™ 将不承担法律责任。

DJI 和 RoboMaster 是深圳市大疆™ 创新科技有限公司及其关联公司的商标。本文出现的产品名称、品牌等，均为其所属公司的商标。本产品及手册为大疆创新版权所有。未经许可，不得以任何形式复制翻印。

 
本文档及本产品所有相关的文档最终解释权归大疆创新所有。如有更新，恕不另行通知。请访问 www.robomaster.com 官方网站以获取最新的产品信息。

简介


RoboMaster 麦克纳姆轮是为智能全向底盘而设计的全向轮，用于全向移动的应用场景。分左旋麦克纳姆轮和右旋麦克纳姆轮。

部件说明

RoboMaster 左旋麦克纳姆轮

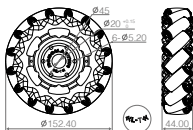


RoboMaster 右旋麦克纳姆轮

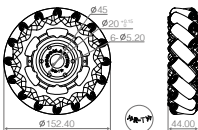 

安装与使用

 麦克纳姆轮分为左旋和右旋两种，四轮底盘需成对使用。安装的时候，可以在麦轮上查看左旋或右旋标记，再根据下图安装到您的机器人上。

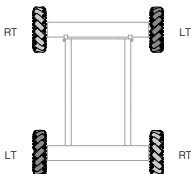

- 麦轮辍子磨损严重后，可自行更换麦轮辍子。
- 访问 <https://www.robomaster.com/zh-CN/products/components/competition>，获取 3D 图纸 (.step) 模型。

规格参数

轮径: 152.4 mm (6 英寸)

轮宽: 44 mm

重量: 660 g

软胶材质: TPU

单轮承重: 20 kg

WWW.ROBOMASTER.COM

R and **ROBOMASTER** are trademarks of DJI.

Copyright © 2019 DJI All Rights Reserved.

Printed in China.

YC.BZ.SS001142.01